




Ring Tones



1. Press the **OK** key to enter the main menu, and then select **Settings->Audio->Ring Tones->Melodies**.
2. Press  or  to highlight the **Intercom Call** option or the desired line.
3. Press  or  to select the desired ring tone.
4. Press the **Save** soft key to accept the change.

Local Directory



To add a contact:

1. Press the **OK** key to enter the main menu, and then select **Directory**.
2. Press the **Options** soft key, and then select **New Contact**.
3. Enter the desired value in the **Name**, **Number** and **Mobile** field respectively.
4. Press the **Save** soft key to accept the change.

To edit a contact:





1. Press the **OK** key to enter the main menu, and then select **Directory**.
2. Press  or  to highlight the desired entry.
3. Press the **Options** soft key, and then select **Edit**.
4. Edit the value in the **Name**, **Number** and **Mobile** field respectively.
5. Press the **Save** soft key to accept the change.



To delete a contact:

1. Press the **OK** key to enter the main menu, and then select **Directory**.
2. Press  or  to highlight the desired entry.
3. Press the **Options** soft key, and then select **Delete** to delete the selected entry.

To assign a speed dial number:

1. Press the **OK** key to enter the main menu, and then select **Settings->Telephony->Speed Dial**.

-
2. Press  or  to highlight the desired digit key, and then press the **Assign** soft key.
 3. Press  or  to highlight the desired entry, and then press the **OK** soft key.


If both the office number and mobile number are stored, press  or  to highlight the desired number, and then press the **OK** soft key again.

Basic Call Features

Placing Calls

To place a call directly:

1. Do one of the following:






- Enter the desired number when the handset is idle.
- Press  to enter the pre-dialing screen.

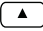



Enter the desired number using the keypad.

If there are multiple lines assigned to your handset as outgoing lines, press the **Line** soft key to select the desired line. If you do not select a line, the handset uses the default outgoing line to dial out.


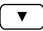


2. Press  ,  or  to dial out.

To place a call from the local directory:






1. Press  when the handset is idle.
2. Press  or  to highlight the desired entry, and then press  or  to dial out using the default line.

If multiple numbers for the contact are stored, press  or  to highlight the desired number, and then press  or  again to dial out using the default line.

To place a call from the call history:

1. Press the **History** soft key when the handset is idle, and then select the desired call history list.
2. Press  or  to highlight the desired entry, and then press  or  to dial out using the default line.

To place a call from the redial list:




1. Press  when the handset is idle.
2. Press  or  to highlight the desired entry, and then press  or .

To place a call using the speed dial key:

Long press the speed dial key to call the preset number directly.

Answering Calls

To answer a call, do one of the following:



- Press the **Accept** soft key.
- Press .
- Press .
- Press .

Note: You can ignore an incoming call by pressing the **Silence** soft key or reject an incoming call by pressing .

Ending Calls

Press .

Call Mute

- Press  during a call to mute the call.
- Press  again to un-mute the call.

Call Hold and Resume

To place a call on hold:

Press the **Options** soft key during a call, and then select **Hold**.

To resume a call, do one of the following:

- If there is only a call on hold, press the **Resume** soft key.

-
- If there are two calls on hold, press the **Resume** soft key to resume the current call.
Press the **Swap** soft key to swap between calls.




Call Transfer

You can transfer a call in the following ways:




Blind Transfer

1. Press the **Options** soft key during a call, and then select **Transfer**.
2. Enter the number you want to transfer the call to.
3. Press the **Transfer** soft key.

Semi-Attended Transfer



1. Press the **Options** soft key during a call, and then select **Transfer**.
2. Enter the number you want to transfer the call to.
3. Press  ,  or  to dial out.
4. Press the **Transfer** soft key when you hear the ring-back tone.

Attended Transfer

1. Press the **Options** soft key during a call, and then select **Transfer**.
2. Enter the number you want to transfer the call to.
3. Press  ,  or  to dial out.
4. Press the **Transfer** soft key after the call is answered.

Call Forward

To enable the call forward feature on a specific line:

1. Press the **OK** key to enter the main menu, and then select **Call Features**
-> **Call Forward**.
2. Press  or  to highlight the desired line, and then press the **OK** soft key.